
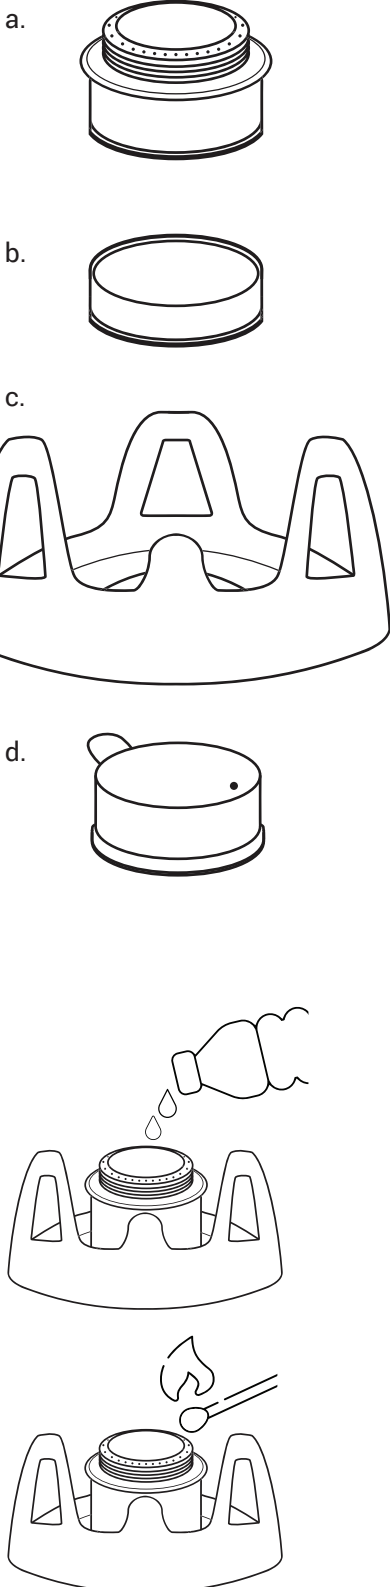


Manual for Gipfel Mini Spirit Burner / Alcohol Stove

- Material: Brass, and rubberised O-ring inside the lid.
- Specs: 6.5 cm by 9.7 cm. Weight: 142 grams. Burn time depends on fuel type, but on average 100 ml = 30 mins of burn time.
- Fuel type Denatured alcohol, Methanol, Ethanol, Rubbing Alcohol

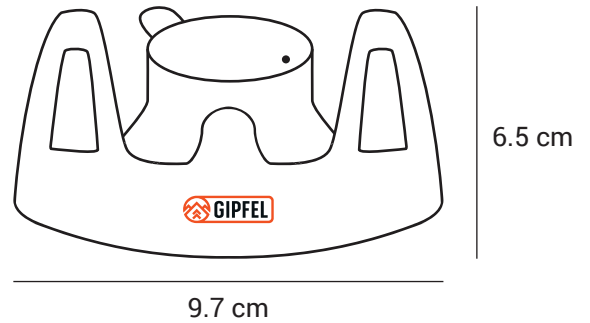

■ Components:

- Stove
- Stove lid/screw on cap
- Stove frame
- Flame regulator or Simmer Ring
- Carrying pouch

■ Use Instructions:

- Unscrew the lid from the stove, & place the stove within the frame
- Place the stove & frame on even ground, away from wind
- Fill the stove 3/4th with fuel
- **Important:** Wipe of any spills around the stove
- Ignite the stove (Denatured alcohol is quick to catch a flame)
- The flame should stabilise in a few seconds
- To further regulate the flame, place the regulator cover or the simmer ring over the stove. Wait for a minute or so for the stove to heat up, before placing the simmer ring. **And place with caution, so as not to burn yourself.**
- Place the cooking pan over the frame. Pan and contents should be less than 5 kgs. Also, a large diameter of the pan may suffocate the flame. **Test your pan compatibility, before leaving home.**
- Once cooking is done, close the regulator lid to extinguish the flame.
- Wait till the stove is cool enough to close it with the lid.
- The stove lid has a rubberised O-ring that will help seal the fuel inside the stove for storage until next use.

■ Other notes

- For colder weather, keep the fuel warm to ensure it vaporises and ignites quickly.

