

GIRNAR 2

2 Year Warranty 2 Jahre Garantie Garantie de 2 ans 2 Años de Garantía 2 Års Garanti





www.gipfelclimbing.com

Gipfel Climbing Equipment Maxwel Exporters, Kunda Road Partapur, Meerut 250103, UP India

Customer care: cs@gipfelclimbing.com


This tent consists of:

- 1 x Inner tent and outer rainfly




- 3 x Poles (1 big and 1 small)

- 13 x Ground Anchors

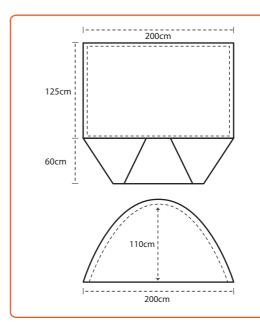

Step 1

Spread the tent and anchor the 6 ground points to the ground.

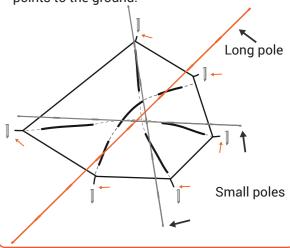

Step 2

Insert the poles in the pole sleeves. The poles must be inserted in the respective sleeves as shown in Figure 1(Step 1).



Step 3

Anchor the guy lines at all 7 points.



Note

If you would like to remove the outer rainfly and only use the inner tent as mosquito net, you can easily disconnect the outer from the inner and pitch the tent like this.

